



Sound Insulation Prediction Software

Installation Instructions for Network INSUL (version 6.3)

Introduction

INSUL can be run over a Local Area Network (LAN). Install INSUL on one computer on the network and plug the network Hasp key into that computer. On each other computer on the network you must install the Hasp drivers using the HASPUsersetup.exe file on the CD. This file can also be downloaded from the INSUL website (www.insul.co.nz) Once these drivers have been installed the computer will be able to communicate with the network key to determine if any licenses are available. It is not necessary to install INSUL on every computer as it can be run from one network location (eg a file server). Usually one would install INSUL on the network file server. Each user will need access rights to the folder where INSUL has been installed.

Install INSUL

1. Insert the INSUL CD into the CD-ROM drive. Start the INSUL installation program by running the program setup.exe in the folder INSUL.
2. Read the instructions on the Welcome page and click the next button.
3. Read the Software license Agreement and if you accept the terms of the licence, click the Yes button.
4. If you wish to read the INSUL release notes you may scroll down the Readme Information then click the Next button.
5. Type your name and the company name in the appropriate fields and click the Next button.
6. To choose a particular destination directory for INSUL's files click the Browse button. To accept the default destination directory click the Next button. Note that this folder should be accessible by all users on the network.

7. To change the Program folder where program icons will be stored enter a new folder name in the Program Folder field, otherwise leave the default folder name. Click the Next button.
8. If you are satisfied with the settings click Next to begin copying the necessary files.
9. Once the installation process has finished you can start INSUL.
10. INSUL should start and display the About screen. This should have the version no. of INSUL, the version no. of the key and the serial no.
11. On each computer that you want to run INSUL from you will need to install the Hasp key drivers. Run the file HASPUsersetup.exe on each computer.
12. You should now be able to run INSUL from each computer by running the application file Insul63.exe from the network folder where you have installed it.
13. The operation of the key software can be monitored by starting an internet browser such as Internet Explorer or Firefox and typing into the address bar localhost:1947. This shows the Hasp keys connected to the system and allows one to change and monitor various settings.